Supplemental Material for "A modular, open-source, slide-scanning microscope for diagnostic applications in resource-constrained settings"

Qiang Lu¹, Guanghui Liu¹, Chuanli Xiao¹, Chuanzhen Hu¹, Shiwu Zhang¹, Ronald X. Xu¹, Kaiqin Chu¹, Qianming Xu^{2,*}, and Zachary J. Smith^{1,*}

¹University of Science and Technology of China, Department of Precision Machinery and Precision Instrumentation, Hefei, Anhui, China

²Anhui Agricultural University, Hefei, Anhui, China

*Address correspondence to: QX: xuqianming2006@163.com, ZJS: zsmith@ustc.edu.cn

Contents

1. Component Details	1
2. Stepwise illustration of the building procedure	3
3. Illustration of wiring scheme	10
4. Program link and brief manual	10
4.1. Acquiring images and microscope operation.	11
4.2. Grid scanning	12
4.3. Image mosaic by Fiji	13
4.4. Software for USB camera	15

1. Component Details

	Number	Items	Manufacturer	Part	Main parameters	Amount	Price/RMB
				Number			
	1	Illumination	Numegv led co., Ltd	MR16	36 LEDs; 7 W; 220V	1	17
ſ					Input		
	2	Objective	Fujian FuGuang Digital	CCTV	f=4mm; F1.2; 1/3"	1	10
			Technology Co., Ltd				
ten	3	Tube lens	Fuzhou Forsete Optical	FSLM3514	f=35mm; F1.7; CS	1	90
sys			Instrument Co., Ltd		connector		
ä	4	Camera	Shenzhen Mingshi Wei	VK-U500	Color camera;	1	628
ptic			Technology Co., Ltd		CMOS;		
ŏ					2592 x 1944 pixel		
	5	Bearing housing	Company of YunDing	28-32-20	ID=28mm;	1	4
			Bearing of Shandong		OD=32mm;		
					H=20mm		
	6	Breadboard	Shenzhen Hengyu	250 x 250	250 x 250 x 13mm	1	310
~			Laser Instrument Co.,				
ical structure			Ltd.				
	7	X-Y stage	Dongguan Jutian Li	LY60-CM	Range= ±6.5mm;	1	420
			Pneumatic Technology		Minimum scale, 10		
			<u>Co., Ltd</u>		μm		
an	8	Z stage	Dongguan Jutian Li	LZ60	Range= 10mm;	1	200
ech			Pneumatic Technology		Minimum scale, 10		
ž			<u>Co., Ltd</u>		μm		
	9	Stepper motors	Wenzhou Pufei De	42BYG39	Maximum torque,	3	96

			Electric Co., Ltd.		0.4 Nm		
	10	Motor controllers	Wenzhou Pufei De	DM3230	Maximum 128	3	120
			Electric Co., Ltd.		subdivision		
	11	Microcontroller	Arduino	Uno	MEGA 2560	1	53
	12		Poijing Optical Contury	SPF101,	L=25mm	7	105
	13	Ontinal manta 8		SP124,	L=100mm	2	70
	14		Beijing Optical Century	SP135,	L=150mm	1	50
	15 Holders		Instrument Co., Ltu	PH101	L=25mm	1	25
	16			PH102	L=50mm	1	35
	17			BC205		1	40
	18 Beij		Beijing Optical Century	BP111		1	35
	19	Mounting plates	Instrument Co., Ltd	BP114		1	40
	20			BP118A		1	35
	21		Zolix Instrument Co.,	PPB15	H=15mm	4	40
	22		<u>Ltd</u>	ACCA-1		2	40
	23	90-degree post	Beijing Optical Century	CPA101		2	98
		couplers	Instrument Co., Ltd				
	24	Motor-Stage	Company of Tongjiu	5-13	Switching diameter:	3	60
		couplers	Transmission		5-13mm		
	25	Blue LED	Optodiode, Inc.	OD-469L	CWL=470nm	1	209
e	26	Excitation Filter	Shanghai Huoda	M47	CWL=470nm;	1	100
sene			Xingguang Co., Ltd		FWHM=10nm;		
esc					Diameter=15mm		
nor	27	Emission Filter	Shanghai Huoda	M53	CWL=530nm;	1	280
Ē			Xingguang Co., Ltd		FWHM=10nm;		
				Doot loo Mo	Diameter=25mm		10
	28	Rubber dampers	Shanghai Jingteng	D20^H20 M6	M6 screw	4	16
			<u>Alangsu Hardware Co.,</u>				
	29	Headless screws	Thorlabs	SS6MS20	M6 x 20mm	5	8
	30	Cap screws	Zhongshan Taiming	M5-35	M5 x 35mm	4	4
			Hardware Co., Ltd				
	31	Cap screws &	Thorlabs	SH4MS10	M4 x 10mm	2	3
		square nuts					
	32	Cap screws	Thorlabs	SH4MS25	M4 x 25mm	2	3
sis	33	Washers	Thorlabs	W25S050	M6	8	4
othe	34	Microscope slide	Beijing Tektronixhui	8.2	L=8.2cm	2	14
0		clamps	Technology Co., Ltd				
	35	Cap screws	Thorlabs	SH6MS12	M6 x 12mm	1	1
	36	Instant glue	Shanghai Huancai	502	Instant glue	1	2
			Industry Co., Ltd				
	37	LED mount	Xingguang Co., Ltd	HS255-ND	Heatsink TO-5 2W	1	75
					black		
	38	Headless screws	<u>Thorlabs</u>	SS4MS12	M4 x 12m m	2	2
	39	Switching power	Hong Kong Mingwei	S-50-12	Output: 12 V	1	36
		supply	Power Co., Ltd.				

40	S	cotch tape	Kunshan Electronics	Weida Co., Ltd	Si	3M600	12mm x 32m	1	2
Total Co	tal Cost Bright field only						¥2645/\$390		
(RMB/\$	5)	Plus fluorescence						¥ 3413/\$498	

S1 Table. Component list including supplier and source (hyperlink). For those who can't access linked sources online, local equivalents can be easily substituted.

A complete and comprehensive list of components used in the construction of the low-cost automated microscopy system is supplied in S1 Table, above. The list provides a description, part number, and a link to the supplier. As the majority of these supplies are standard opt mechanics or electronics, for those in parts of the world where listed suppliers are not available, equivalent products can be easily substituted. As all purchases were made using RMB, the current exchange rate of 6.7868 RMB per dollar was used when calculating the dollar cost.

2. Stepwise illustration of the building procedure



Where we start.

S1 Fig. The picture above shows nearly all the components that will be used to build the low-cost and open-source microscope. This work will be divided into 6 steps, as shown in the following 6 figures. Each component has a given number in S1 Table, and this number will be shown next to the component's position in the following figures. Brief explanations below each figure present additional information and tips for construction.

The 1st step: preparing the baseplate.



S2 Fig. Both '28' and '6' are tapped for M6 screws ('29'). In (D), the two rubber dampers in lower positions aren't fixed on the corners holes because the screw holes indicated by blue circles will be used to fix the X-Y stage as shown in S3 Fig, below.





S3 Fig. In (B) and (C), four long bolts ('30' in S1 Table) fit in the four countersinks in the corners of the X-Y stage and screw into 4 nuts to fix them to the baseplate (shown in (E)). '21' (H=15mm) brings the stage to a suitable height for motor attachment. In Figure (G) and (H), the mounting plate ('19') connects with the motor by two sets of short screws and square nuts ('31') to adjust the motor's height. Tape applied to the lower surface of mounting plate (as shown in (H)) helps the motor to move more smoothly on the baseplate.





S4 Fig. In (A), '12' has M6 male screw at one end and M4 internal screw at the other end. Four of '12' are fixed on the baseplate using the M6 screw, as shown in (B). Four M4 screws ('31') mount the Z stage to the posts. In (E) and (F), mounting plate ('20') connects with the motor using instant glue ('36'). Only a small bead of glue is required, and the connection is quite stable, yet the two parts can be separated if required by delivering a sharp blow to the baseplate with a hammer.

The 4th step: building the optical system.



S5 Fig. (A) '13' and '14' can be replaced by a single post 250mm long if desired. (B) The support is erected in the center of the X-Y stage's upper surface through the M4 screw. In (E) and (F), the bearing fits within the CCTV lens's housing, and the board lens fits into the bearing's housing. When fluorescent images are taken, one emission filter will be needed to be placed between the CCTV lens and board lens. In this case, the order of construction in (E) and (F) should be: camera, tube lens, filter, and objective. (I) A 90-degree USB cable may help to reduce cable strain and allow the camera to be placed closer to the table surface.

The 5th step: installing the sample stage.



S6 Fig. (A) '12' and '13' can be replaced by one 125mm long post. (B) 4 washers ('33') are stacked for each finger of the sample mounting clamp.



The 6th step: installing the bright field and fluorescence illumination.

S7 Fig. (A) The LED light bulb is covered with diffusing tape to decrease the coherence of the source at the sample plane and improve the image quality. (B) The mounting plate and illuminator are fixed using instant glue. (E) The LED is matched to a heatsink. (F) The LED is mated with the excitation filter by instant glue at the edges, and the LED-filter assembly is glued to the optical post holder ('16') for mounting.

3. Illustration of wiring scheme



S8 Fig. Wiring and control scheme. Wire colors are used to aid visualization. The colors of the four lines from three stepper motors correspond with the real wire colors. A physical or electronic switch in the LED's circuit can be used to control the blue fluorescent light and shift freely between the bright field and fluorescence modes.

4. Program link and brief manual

A RAR archive containing standalone executable, LabVIEW VIs, etc. can be found at the

Figshare repository, DOI: 10.6084/m9.figshare.5931709, or alternatively at

http://staff.ustc.edu.cn/~zsmith/research. The package includes four folders and several files,

as introduced below.

The computer control of the motors is mediated by an Arduino microcontroller. To provide instructions to the microcontroller, it is necessary to load the Arduino sketch "motor-control" (located inside the folder "Arduino program") using the Arduino IDE, available at http://www.arduino.org/downloads.

The control software consists of three LabVIEW VIs, "Microscope," "Microscope-fluorescence," and "Square scanning," which we provide so that they can be freely edited by users. For those without access to LabVIEW, these VIs have each also been wrapped into standalone executables, which can be installed by running the "setup" file in the folder "Microscope programs."



4.1. Acquiring images and microscope operation.

S9 Fig. Control Panel of main program in bright field

The first executable file is 'Microscope.exe' which is the main program used for bright field microscopy. The main panel of this program is shown in S9 Fig. The first part of this panel is 'Parameters settings'. The two options of 'Com' and 'Camera' are the com port and camera id of the Arduino and USB camera, respectively. 'Threshold1', 'Threshold2', and 'Threshold3' are three threshold values to make judgements in the auto-scanning program and it is recommended to keep the default values. 'X step' and 'Y step' represent the number of pulses given to the motors between images in the scanning mode. In our system, given the gear ratio of the stages, 5.89 pulses moves the system by 1 micron.

'Adding images exe path' should be directed to the 'Add_images1.exe' program. This is a MATLAB standalone executable that automatically converts the auto-pathfinding images into a square grid by adding "dummy" images, as described in the main text. It is contained in the "4.Add images exe" folder. Within this folder, the user must click on "Installer" to install the necessary runtime environment for the executable. Once the runtime environment has been installed, set the "Adding images exe path" in the control panel to the exe itself (i.e. do not only provide the folder). 'Focus images path' is used to store temporary images used in the autofocusing, while 'Result images path' should be directed to the folder where you want to save the final scanning images.

In the second portion of the GUI are the buttons to operate the program. In the top portion, four buttons allow the user to move the sample in X and Y in a stepwise fashion, moving a distance equal to the number inputted into the "Distance" box. In the middle portion of this section, the 'Focus' button will auto-focus the image and also automatically start the auto-pathfinding program. When scanning is completed, the bottom portion of this section will display the total image acquisition time, along with Grid size (x and y) and first file index (x and y). The grid size parameters indicate the column and row size of the full image matrix, while the latter two parameters represent smallest numbers of x and y in the naming system. These four parameters should be noted, as they will be used when running the image mosaic program.

We note here that the second executable file, "Microscope-fluorescence.exe," which is used for fluorescence imaging, is largely similar to this program. However, the "Adding images exe path" should be set to "Add_images2.exe.

4.2. Grid scanning

While our auto-pathfinding algorithm works for most situations, in some cases users may want to simply scan a grid-sized region of a predefined size. In this case, the user can open the third program, "Square scanning.exe," whose control panel is shown in S10 Fig. The inputs Com, Camera, X Steps and Y Steps have the same meaning with the corresponding options in "Microscope" programs. "Image path" contains the folder path where result images are saved. "X times" and "Y times" represent the final size of the scanned grid in X and Y. Scanning starts from top left corner of the image matrix and goes right, then down, then left, then down, and so on in a snakelike track. Acquired images are saved with incrementally increasing filenames (0.bmp, 1.bmp, 2.bmp.....).



S10 Fig. Control Panel of Square scanning program

4.3. Image mosaic by Fiji

Fiji is a free distribution of ImageJ containing several extra packages compared to the "vanilla" ImageJ distribution, and is available at: <u>http://fiji.sc/#download</u>

To mosaic images acquired by the system, navigate to Plugins->Stitching. In "Stitching," choose "Grid/Collection stitching" option. S11 Fig lays out the important options to select during this process. Part A describes the case where the auto-pathfinding algorithm has been utilized. In the "Type" option, we choose "Filename defined position." All the options arrows with red arrows must be filled using the values Grid size x, Grid size y, First file index x, and First file index y from the output of the "Microscope" GUI. The "Directory" option should be set to the location of the image files. "File name for tiles" should be input as shown (-{x}-{y}.bmp). Finally, click the "Ok" button to run the program and the fused image will be shown after several seconds.

If the user collected data using the "Square scanning" GUI, Part B is used for the mosaic process. In the "Type" option, we choose "Grid: snake by rows" and in the lower "Order"





option, "Right & Down" is chosen. In the next dialog box, "Grid size x" and "Grid size y" are the values of "X times" and "Y times" from the "Square scanning" software. "First file index i" option should be set to "0", "Directory" should be the location of the images, and the "File name for tiles" should be set as shown ({i}.bmp).

4.4. Software for USB camera

The exposure settings of the USB camera are controlled using a separate software ("Mind Vision 演 示 程 序 ") that can be freely downloaded: <u>http://www.mindvision.com.cn/rjxz/list_12.aspx?lcid=63</u>. Although the language of this software is Chinese, translations of the critical settings are shown below in S12 Fig.

Camera settings	Shoot Shoot settings
	🖳 🗑 🇭 🦵 🛪 🔤 🥥
【工业相机相机设置 日初 田が登載 伊太法教 日动 御子动 日动 御子动 日动 御子动	【工业相机;相机设置 人物案 相机输出模式 十字线 设备信息 國光控制 颜色调整 查表变换 (LIT) 图形变换 自平衡 Manual operation 模式: 自动 ● 手动 设置白平衡 (裕(平衡窗口对准白色) 照物效果更好) 红色增益(倍数): 1.00 0 3.99 延色增益(倍数): 1.00 0 3.99 鼓色增益(倍数): 1.00 0 3.99 颜色强化 他和度: 200 0 1.200 1.200 其他特效 黑白模式 底片模式
相机配置参数存档 分组: ▲ ● ● 保存 恢复默认参数 保存当前配置参数到指定文件 从指定文件中加载参数 加载方式: ● 按跟称 ● ⑦ 切换参数组时自动保存 ✓ 关闭相机时自动保存	相机配置参数存档 分组: ○ A ○ B ○ C ○ D 保存 恢夏默认参数 保存当前配置参数到指定文件 从指定文件中加载参数 加载方式: ● 按型号 ● 按眼称 ● 按序列号 ☑ 切換参数组时自动保存 ☑ 关闭相机时自动保存

S12 Fig. Useful choices to use the camera control software

In the 'Camera setting', only two panels of 'exposure control' (S12 Fig left) and 'color adjustment' (S12 Fig right) are important. The settings that are labeled in red circles should be chosen. For bright field operation, Gain of 1.25 and Exposure time of 5.0 ms are suitable. For fluorescence images, depending on the sample, Gains of 5-10 and Exposure times of 400 ms or so are required, due to the much weaker emission. In order to reduce noise in the fluorescence images, red and blue gains should be set to zero.