

Do it yourself smartphone fundus camera – DIYretCAM

Biju Raju, N S D Raju¹, John Davis Akkara², Avinash Pathengay³

This article describes the method to make a do it yourself smartphone-based fundus camera which can image the central retina as well as the peripheral retina up to the pars plana. It is a cost-effective alternative to the fundus camera.

Key words: Fundus camera, fundus photography, mobile phone fundus camera, retinal imaging, smartphone

Access this article online

Website:

www.ijo.in

DOI:

10.4103/0301-4738.194325

Quick Response Code:



Fundus photography plays a key role in monitoring and follow-up of patients. Recently, smartphones have been used for fundus documentation.^[1] Here, we describe a cost-effective method of a do it yourself (DIY) smartphone fundus camera (DIYretCAM) using commonly available materials [Table 1, Fig. 1].

Assembling the Do It Yourself Smartphone Fundus Camera

Align and center the narrow end of the large reducer base on the camera hole of the smartphone cover. The area of contact of the reducer and cover is then carefully glued [Fig. 2]. The 50 mm pipe is used as the optical tube. A piece of sandpaper 17 cm × 14.8 cm, is rolled and inserted into the tube and glued, the sanded surface facing inward to prevent dazzle. Another 15.5 cm × 2 cm sandpaper is glued inside the reducer base leaving 1.0 cm bare area toward the wider end [Fig. 3].

Insulation tape is used to camouflage the optical tube and reducer base. At one end, for the condensing lens, apply 8–12 rounds of tape for snug fitting of the lens [Fig. 4a and b]. The phone is positioned in the cover, the optical tube inserted into the reducer, the 20 D fixed and the handheld device is

ready [Fig. 4c]. For phones where the centers of the camera and flash are separated beyond 1 cm, a longer optical tube will be required.

Table 1: Materials required

1. Smartphone and its hard back cover
2. Condensing lens (20D)
3. PVC pipes
 - For optical tube: 50 mm diameter pipe, 17 cm long
 - For Slit lamp mount: 40 mm pipe, 10 cm long
4. Reducer Base
 - Large (50-65 mm)
 - Small (2 numbers) (35/45 mm)
5. Superglue (4 numbers)
6. Three mm Cardboard (2 pieces measuring 12 x 6 cm each)
7. Eight mm/6 mm bolt (1) with matching Hexagon Nut (1) and washer
8. Black (matte finish) sandpaper (Emery paper). [Alternatively one can spray-paint the sanded surface of the commonly available sand paper with a flat black spray paint]
9. Electrical insulation tape
10. Scissors, a ruler and Mica cutter (for cutting cardboard)

PVC: Polyvinyl chloride

Video Available on: www.ijo.in

Department of Vitreoretinal Diseases, Vasan Eye Care Hospital in Association with Ranjini Eye Hospital, ¹Department of Cataract and Anterior Segment Surgeries, Vasan Eye Care Hospital in Association with Ranjini Eye Hospital, ²Department of Glaucoma, Westend Eye Hospital, Kochi, ³Department of Vitreoretinal Diseases, L V Prasad Eye Institute, Visakhapatnam, Andhra Pradesh, India

Correspondence to: Dr. Biju Raju, Vasan Eye Care Hospital in Association with Ranjini Eye Hospital, Near Powerhouse, Vyttila, Kochi - 682 019, Kerala, India. E-mail: drbijuraju@gmail.com

Manuscript received: 13.02.16; Revision accepted: 03.08.16

This is an open access article distributed under the terms of the Creative Commons Attribution-NonCommercial-ShareAlike 3.0 License, which allows others to remix, tweak, and build upon the work non-commercially, as long as the author is credited and the new creations are licensed under the identical terms.

For reprints contact: reprints@medknow.com

Cite this article as: Raju B, Raju N, Akkara JD, Pathengay A. Do it yourself smartphone fundus camera – DIYretCAM. Indian J Ophthalmol 2016;64:663-7.



Figure 1: Materials required for the do it yourself smartphone fundus camera

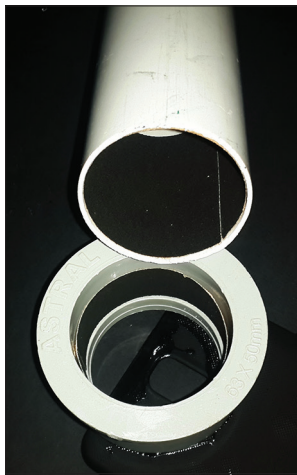


Figure 3: Sandpapers used to reduce the dazzle

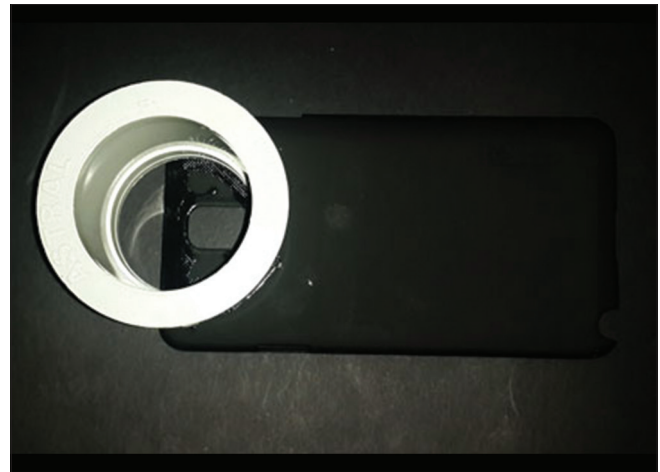


Figure 2: The reducer glued to the back cover



Figure 4: (a) The optical tube camouflaged with insulation tape. To fit the 20 D, few more rounds are applied to increase the thickness (arrow). (b) The condensing lens fixed on the optical tube. (c) The handheld device is ready to use

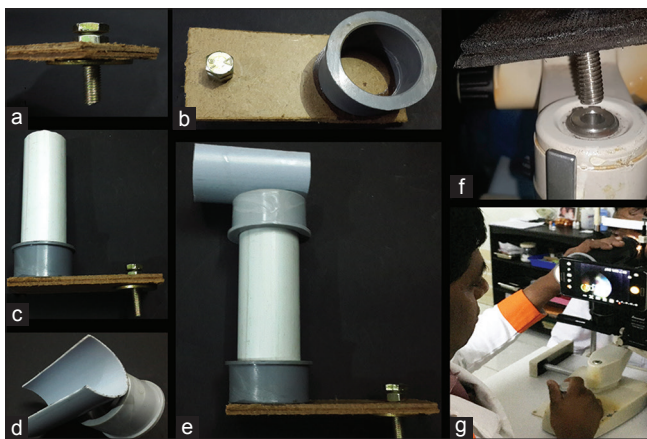


Figure 5: Slit lamp mount. (a) The nut, bolt, and washer in place. (b) Reducer is fixed. (c) 40 mm pipe fixed. (d) Optical tube holder. (e) Assembled mount. (f) Bolt placed in the slot. (g) The do it yourself smartphone fundus camera on the slit lamp

Assembling the Slit Lamp Mount

On each cardboard, make a hole to fit the bolt (8 mm for Haag-Strait model/Carl Zeiss Slit lamps or 6 mm for Topcon Model Slit lamps), using a pointed knife/Mica cutter and scissors, centered at 2.5 cm from one of its edges. The nut is tightened on the bolt, and the bolt passed through the holes in the cardboard pieces and tightened. The washer glued, centering the inner ring on the bolt at the under surface of the cardboards. Two cardboards are then glued together forming the platform for the slit lamp mount. Glue is applied around the nut also [Fig. 5a]. The small reducer is glued on the platform with its wider side facing up at the opposite edge [Fig. 5b]. A 40 mm pipe, 10 cm long, is fixed to the reducer [Fig. 5c]. For the optical tube holder, a 50 mm pipe is cut transversely, at approximately two-third of its diameter, to a length of 10 cm, and the smaller piece is discarded. The larger piece is then glued with its concave surface facing up, to the second small reducer, on to its narrower end as in

Fig. 5d. The mount is then assembled as shown in the Fig. 5e. The shorter part of the optical tube holder faces the patient's eye. The mount is also camouflaged with the insulation tape. Alternatively, using spray painting can enhance the appearance (optional) [Video 1].



Figure 6: (a) The do it yourself smartphone fundus camera used as a hand held the device. (b) The do it yourself smartphone fundus camera can be held at the condensing lens and supported with the other hand on the camera. (c) Like in indirect ophthalmoscopy, scleral depression is done after stabilizing the do it yourself smartphone fundus camera

Using the Do It Yourself Smartphone Fundus Camera

To use the DIYretCAM on the slit lamp, move the observation illumination columns to one side, and fix the mount by placing the bolt in the slot for the focusing rod [Fig. 5f]. Different slit lamps have different diameters for the slot. For slit lamps with larger diameter slots, a few rounds of insulation tape on the bolt will improve stability. The optical tube is placed on the holder. The DIYretCAM can now be used like a fundus camera using the joystick [Fig. 5g], with the camera in the continuous flash on mode.

As in indirect ophthalmoscopy, the images are laterally reversed and vertically inverted, and therefore the movements to align the field of view, will be in opposite direction to the images seen. In the handheld method, one can hold the optical tube or the camera or the 20 D lens [Fig. 6a and b], and use the camera in the photo or video mode. In video mode, imaging of the peripheral retina till pars plana [Fig. 7] is possible with simultaneous scleral depression [Fig. 6c].

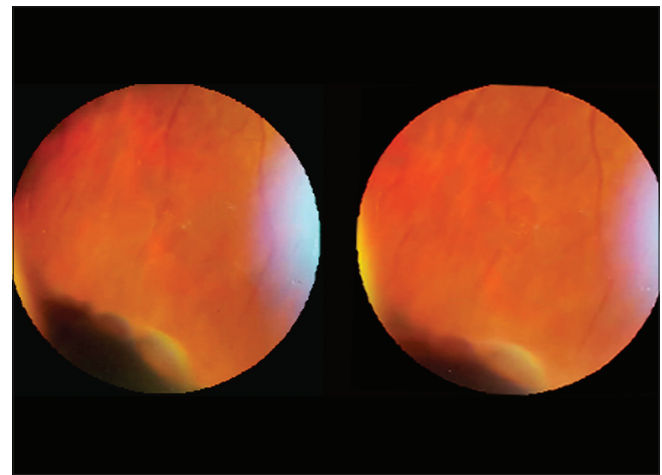


Figure 7: Stereo pair showing pars plana cysts

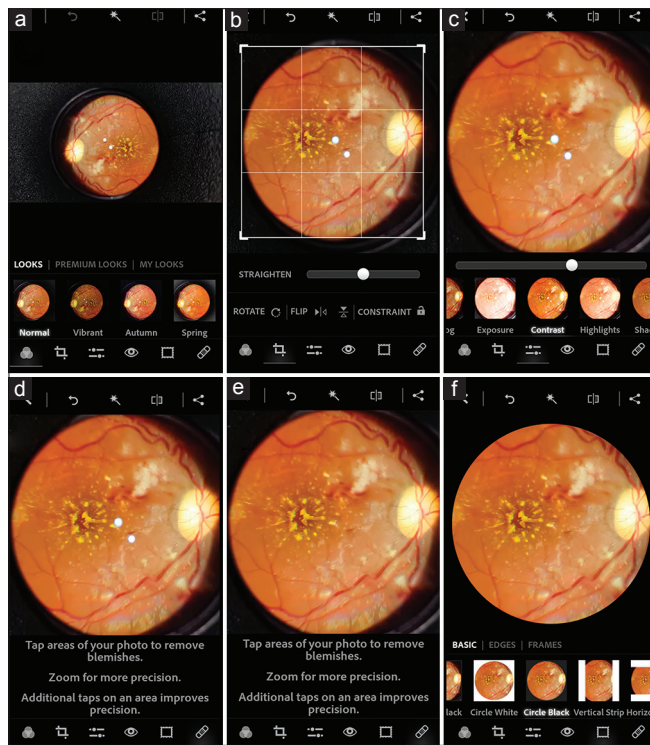


Figure 8: Editing the images. (a) The images opened in Photo Express. (b) The image cropped, rotated to correct orientation. (c) Improve the contrast, brightness, etc., (d) The blemish removal tool is used to remove the reflections (e) After removing the reflections. (f) The circle black mask is applied

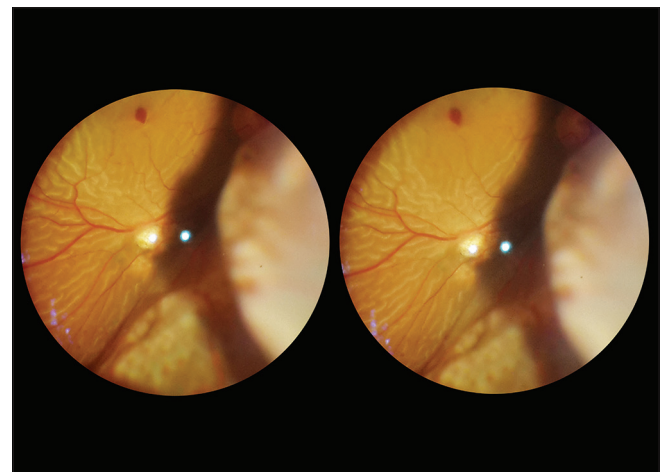


Figure 9: Stereo pair taken with the do it yourself smartphone fundus camera shows a recurrent retinal detachment with macular hole. Note the bullous detachment inferonasally

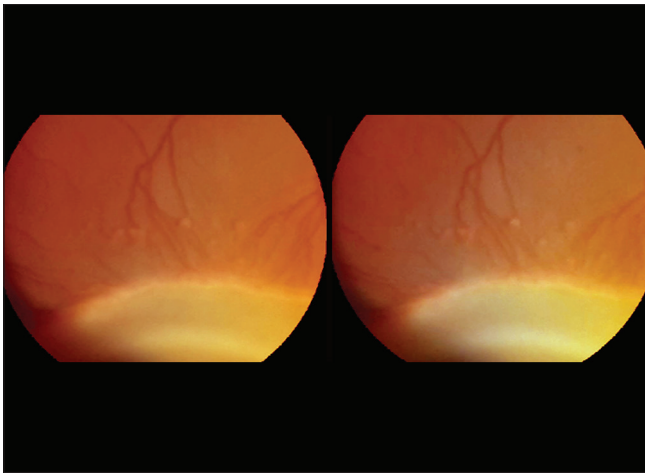


Figure 10: Stereo pair of a Zone II Stage 3 retinopathy of prematurity showing popcorn lesions. The mount of the scleral depressor is clearly made out in stereo

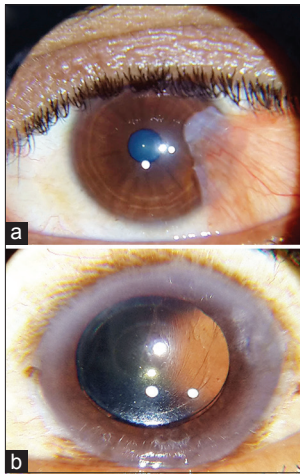


Figure 12: Anterior segment photographs taken with the do it yourself smartphone fundus camera. (a) Vascular pterygium (b) wrinkling of the posterior capsule in a pseudophakic eye

The camera app which is preloaded in the smartphone is good enough for basic fundus photography. We have used Camera FV-5 and Cinema FV-5 (FGAE Studios, Germany, <http://www.cinematv5.com/index.php>) for Android and Camera Plus (Global Delight Technologies, Udupi, India, www.globaldelight.com/iphone/cameraplus) for iPhone and these apps give more control on the image capture with various options such as focus lock and exposure lock.

Image editing can be done on the smartphone itself using Adobe Photoshop Express (Adobe Systems Incorporated, www.photoshop.com/products/photoshopexpress). Editing involves capturing the screenshot of the desired frame from the video and opening the screenshot or image in Photoshop [Fig. 8a]. The image is then cropped, rotated to proper orientation [Fig. 8b] and corrected for brightness and contrast [Fig. 8c] as required. The central reflections may be removed using the blemish removal tool [Fig. 8d and e]. Finally, the image mask (circle black) is applied [Fig. 8f] and the image is saved.

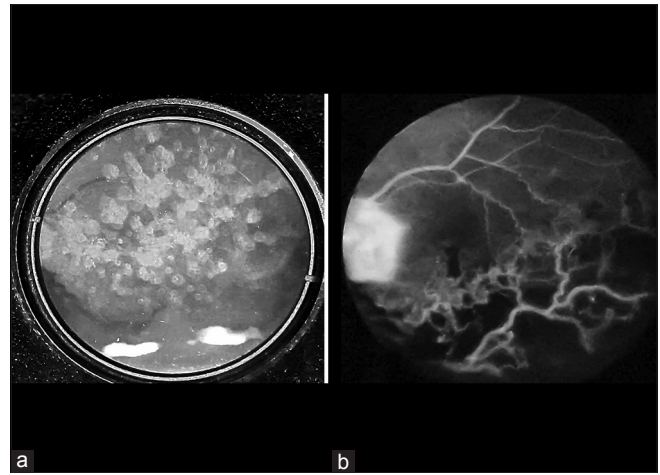


Figure 11: Do it yourself smartphone fundus camera fluorescein angiography. (a) Preinjection photo with only the barrier filter, showing dense asteroid hyalosis. (b) The mid-phase fundus fluorescein angiography showing capillary nonperfusion, macular ischemia and neovascularization on the disc suggestive of neovascular branch retinal vein occlusion with macular ischemia

Table 2: Cost of DIYretCAM

	Numbers needed	Cost per unit (in Indian Rupees)	Cost of materials
Superglue	4	5	20
For DIYretCAM			
Reducer base	1	25	25
Pipe (50mm)	1	25	25
Sandpaper	1	7	7
Insulation tape	1	10	10
Total cost of DIYretCAM (excluding 20D lens and Smartphone with cover)			67
For the mount			
Cardboard	1	10	10
Bolt and nut	1	8	8
Reducer base	2	20	40
Pipe (40 mm)	1	20	20
Total cost for the Mount			78
Total cost (DIYretCAM and slit lamp Mount)			165

DIYretCAM captures cost-effective [Table 2] quality fundus images. It is also capable of imaging up to the pars plana with scleral depression. Stereo fundus photography of the central [Fig. 9] and peripheral retina [Fig. 7] are possible with the DIYretCAM. The DIYretCAM is a cost-effective option for documenting the fundus changes in retinopathy of prematurity [Fig. 10] and in bedridden patients. Although useful in such settings, this device is not intended to replace the fundus camera especially in macular imaging, where, the fundus camera with its reflex free, high-quality imaging gives a better resolution of the macular details.

Holding the phone with one hand and the 20 D lens with the other hand helps to stabilize the device during the learning curve. Once familiar with this technique, the device can be held with the hand holding the 20 D lens, with the optical tube

resting within the web of the thumb and the index finger. We made this device with commonly available materials on the "Do-It-Yourself" concept. With professional help, the mount can be made from sturdier materials like medium density fibreboard (MDF) or Polyvinyl chloride (PVC) pipes, with custom made anchoring bolt, giving a better appearance, and stability to the device. Fluorescein angiography is also possible [Fig. 11] with this device using matched filters as described by Suto *et al.*^[2] This device is also capable of capturing good quality anterior segment photographs as well [Fig. 12a and b].

Financial support and sponsorship

Nil.

Conflicts of interest

There are no conflicts of interest.

References

1. Raju B, Raju NS. Regarding fundus imaging with a mobile phone: A review of techniques. *Indian J Ophthalmol* 2015;63:170-1.
2. Suto S, Hiraoka T, Oshika T. Fluorescein fundus angiography with smartphone. *Retina* 2014;34:203-5.